


This guide is intended to guide you through the basic functions of this navigation system. For details, please refer to Operation Manual.

Basic hardware buttons




- ① **▲ button**
Press to display the touch panel keys for ejecting the media.
- ② **HOME button**
Press to display the “**Top Menu**” screen.
- ③ **Multi-control (Volume knob/G)/MUTE**
Rotate to adjust the AV (Audio and Video) source volume.
Press briefly to hear the current route guidance.
Press and hold to mute the AV source.
- ④ **MODE button**
Press to switch between the map screen and the AV operation screen.
- ⑤ **TRK (◀▶) button**

Screen switching overview

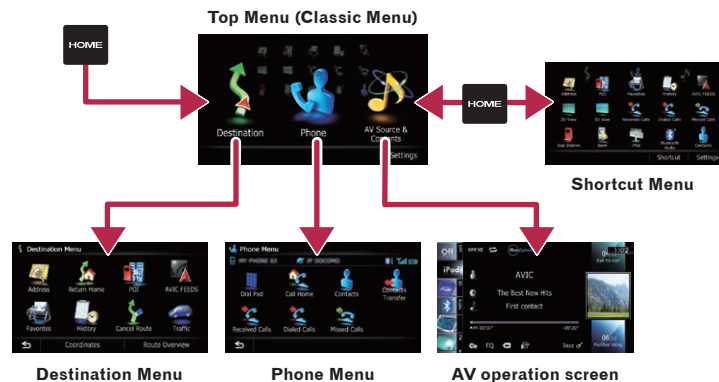


Basic items on the map

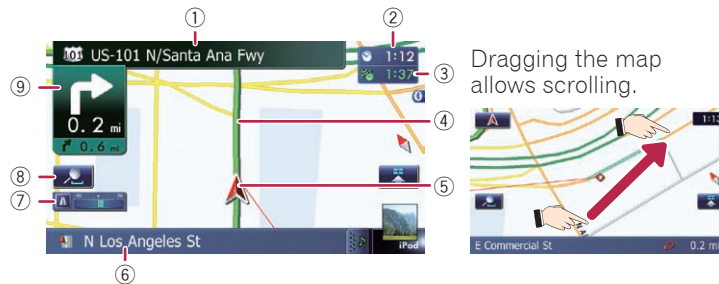

- ① Name of the street to be used (or next guidance point)
- ② Current time
- ③ Estimated time of arrival (default)
- ④ Current route
- ⑤ Current position (or next guidance point)
- ⑥ Street name that your vehicle is traveling along
- ⑦ Eco-Meter
- ⑧ Map control
- ⑨ Next direction of travel

Destination Menu


Touch **Destination** on the “**Top Menu**” screen.

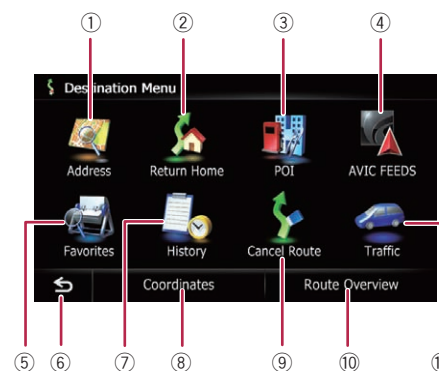

- ① Searches for a location by address
- ② Calculates the route to your home
- ③ Searches for a place such as stores, restaurants, and other facilities (Points Of Interest – POI) in the data-base
- ④ Searches for POIs by using the data on the microSD card
- ⑤ Stores and selects your favorite locations
- ⑥ Returns to the previous screen
- ⑦ Selects a previously routed destination
- ⑧ Searches for a location by coordinates
- ⑨ Cancels your current route guidance
- ⑩ Displays the current route information
- ⑪ Displays traffic information


Searching for your destination by address

- 1 Display the “**Destination Menu**” screen and touch **Address**.

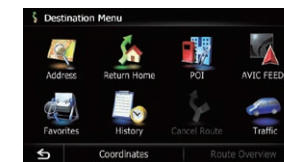

- 2 Select the country and region you want to search.

- 3 Input the information that you want to set as the destination.

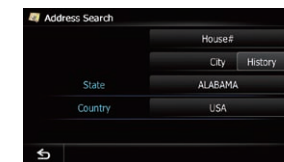

Touch one of the options. After narrowing down your destination, the Location confirmation screen will appear.

- 4 Touch **OK**.



After searching for the destination, the Route confirmation screen appears.

- 5 Touch **OK**.




The navigation system gives you route guidance both visually and by voice.

Setting route guidance volume

- 1

Touch the keys in the following order on the “**Top Menu**” screen.
Settings ➔ **System Settings** ➔ **Volume**
- 2

Touch **+** or **-** to change the volume of the route guidance.

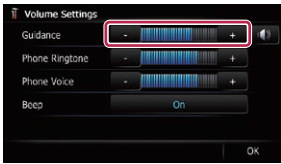

Inserting and ejecting a microSD card

For details about playable files, refer to Operation Manual.

- Inserting a microSD card

Ejecting a microSD card

- 1



Insert your microSD card into the SD card slot until it clicks.
- 1

Press the **▲** button.
- 2

Touch **Eject SD**.
- 3


Press the middle of the microSD card gently until it clicks.
- 4

Pull the microSD card out straight.

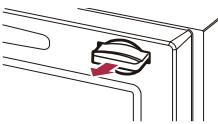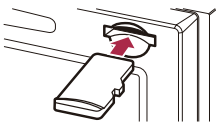

Using the radio (FM)

Scroll the screen by dragging an AV source icon up or down, and tap **FM** on the AV operation screen.

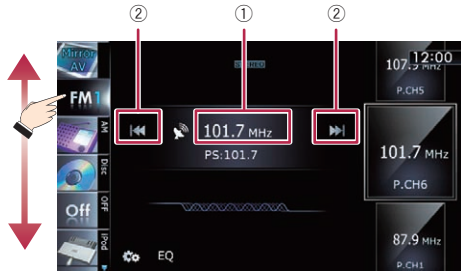

- ①

Displays the current preset frequency
- ②


Scans frequencies until a broadcast strong enough for good reception is found by touching and holding (seek tuning)

Playing your Apple iPod

You can control an iPod by connecting the USB interface cable for iPod (CD-IU51V) (sold separately) to the navigation system.

- 1



Connect your iPod.

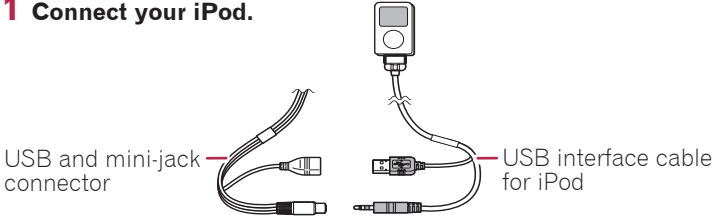

The source changes and then playback will start.

- 2

Tap or drag the key that you want to operate.

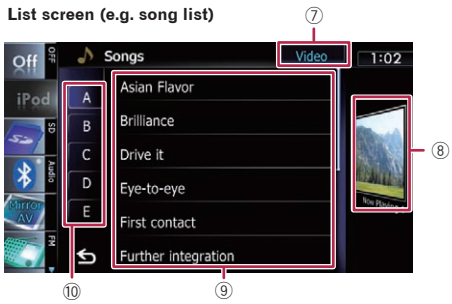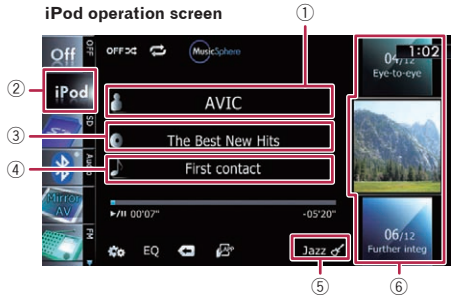

- ①

Displays the artist name list
- ②

Displays the category list
- ③

Displays the album title list
- ④

Displays the song title list
- ⑤

Displays the genre list
- ⑥

Selects the song to play by scrolling the keys up or down. To play the song, tap it
- ⑦

Switches the list screen between music and video
- ⑧

Returns to the iPod operation screen
- ⑨

Starts playback by tapping an item to select
- ⑩

Selects a song by scrolling the character tab up or down. Tap the tab of the character for the song title that you want to display

Pairing your phone


Transferring the phone book

- 1

Activate the Bluetooth® function on your phone.
- 2

Touch the keys in the following order on the “**Top Menu**” screen.
Settings ➔ **Bluetooth Settings**
- 3

Touch **Bluetooth On/Off** to select **On**.

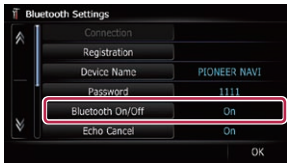


- 4

Touch **Registration** on the “**Bluetooth Settings**” screen.
The system searches for and lists nearby devices.

- 5

Touch your phone on the list.

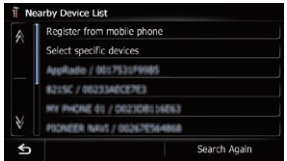

- 6

Enter the PIN code from your phone. (The default code is 1111.)
When pairing succeeds, a message will appear.


- 1

Connect the cellular phone.
- 2

Touch **Contacts Transfer** on the “**Phone Menu**” screen.

- 3


Check that the following screen is displayed, and operate your cellular phone to transfer the phone book entries.

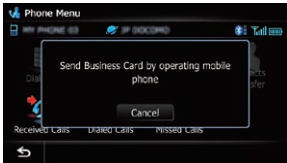

When data transfer is finished, a message asking whether you want to transfer more data appears.

- 4

Touch **No**.

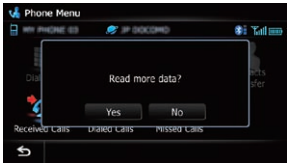

The transferred data is imported to the navigation system.