

This guide is intended to guide you through the basic functions of this navigation system. For details, please refer to the Operation Manual.


### Basic hardware buttons




① ② ③ ④ ⑤ ⑥

- ① **VOL (+/-) button**  
Press to adjust the AV source volume.
- ② **MODE button**  
Press to display the AV operation screen or AppRadio Mode screen.
- ③ **HOME button**  
Press to display the "Top Menu" screen.
- ④ **MAP button**  
Press to display the map screen.
- ⑤ **TRK button**
- ⑥ **▲ button**  
Press to display the "Monitor Setup" screen.

### Switching screens using the touch panel keys

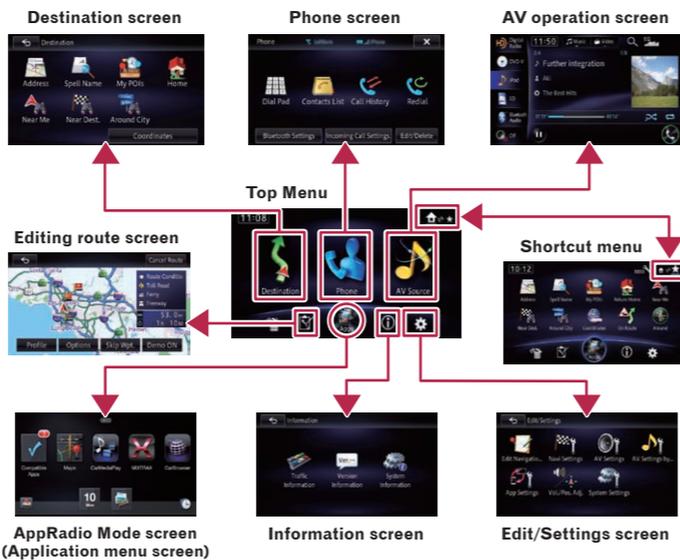

### Switching screens using the hardware buttons

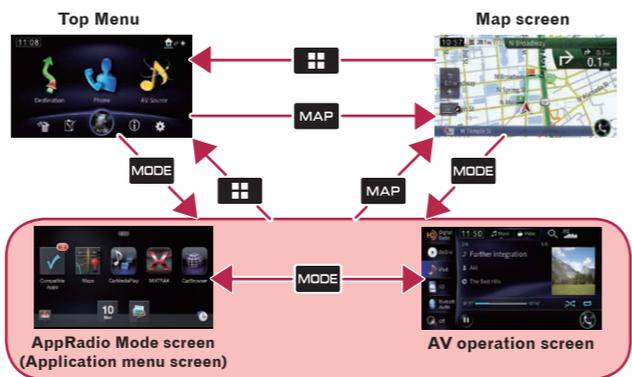

### Destination menu




- ① Returns to the previous screen
- ② Searches for a location by address
- ③ Searches for a facility by name
- ④ Searches for a location from the history or your registered locations
- ⑤ Calculates the route to your home
- ⑥ Searches for a nearby facility
- ⑦ Searches for a facility near the destination
- ⑧ Searches for a facility in a specified city
- ⑨ Searches for a location by coordinates

### Scrolling the map

- ① **Touch and hold a point on the map in the direction that you want to scroll.**  
The map moves in the touched direction.
- ② **To slightly adjust the position, touch **Adju.** first, then touch the desired direction arrow (eight directions).**

### Searching for your destination by address

- ① Display the "Destination" screen.
- ② Touch **Address**.
- ③ Select the country and region.
- ④ Input the destination information.
- ⑤ Touch **Go Here**.
- ⑥ Touch **OK**.

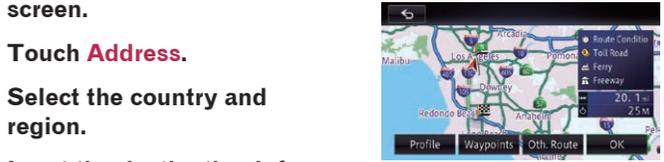

Touch one of the options. After narrowing down your destination, the Location confirmation screen will appear.




When the route calculation is completed, the Route confirmation screen appears.



The navigation system provides route guidance both visually and by voice. If you want to cancel the route guidance, touch  on the "Top Menu" screen.

## Basic items on the map

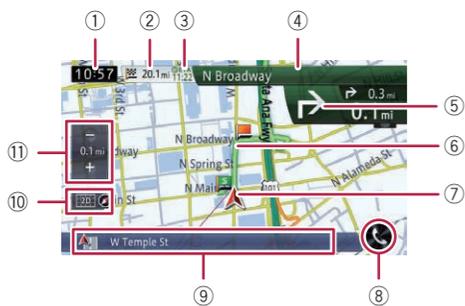

- ① Current time
- ② Distance to the destination (or distance to waypoint)
- ③ Estimated time of arrival
- ④ Next street name (or next guidance point)
- ⑤ Next direction of travel
- ⑥ Current route
- ⑦ Current position
- ⑧ Phone menu key  
Displays the "Phone" screen.
- ⑨ Current street name (or AV information)  
Switches between the current street name and current AV information.
- ⑩ Map control  
Sets the view mode and the map orientation.
- ⑪ Map scale  
Changes the map scale.

## Swipe action on the map

You can operate some navigation functions by using a swipe action. To use the swipe action, touch and hold the next direction of travel on the map screen to display the operation guide. Then, slide your finger toward the function that you want to use on the operation guide.



Operation guide

## Playing your iPod

You can operate your iPod by connecting it to the navigation system using the USB interface cable for iPod (sold separately).

- 1 Display the AV operation screen.**
- 2 Connect your iPod.**  
The source changes and then playback will start.
- 3 Use the touch panel keys on the screen to control your iPod.**

## Using the touch panel keys (iPod)



- ① Switches a source
- ② Switches between the music list screen and video list screen
- ③ Displays the list screen
- ④ Recalls the equalizer curve
- ⑤ Sets the repeat playback range



- ⑥ Sets shuffle playback
- ⑦ Switches between playback and pause
- ⑧ Shows only the current image
- ⑨ Changes the screen size of the video

## Pairing your Bluetooth® devices

You can use various additional functions (hands-free phoning, Bluetooth audio and AppRadio Mode) by connecting your Bluetooth devices to this navigation system. To use the functions, pair the devices with the navigation system in advance.

- 1 Activate the Bluetooth function on your device.**
- 2 Touch the keys in the following order on the "Top Menu" screen.**  
⚙️ → **System Settings** → **Bluetooth Settings**
- 3 Touch Registration.**  
The system searches for and lists nearby devices.
- 4 Touch your device name in the list.**
- 5 Enter the PIN code from your device if required. (The default code is 1111.)**
- 6 Touch OK.**
- 7 Select whether to transfer your contacts if required.**
- 8 Select whether to use the Bluetooth audio device if required.**
- 9 Select whether your device is an Android™ device or not.**
- 10 Select whether to use the AppRadio Mode if your device is an Android device.**  
If your device is an iPhone, proceed to step 11.
- 11 Touch OK.**  
When the pairing is complete, you can use the functions.



## Using AppRadio Mode

You can control applications for iPhone and smartphone directly on the navigation screen (AppRadio Mode). To use the AppRadio Mode, install the AppRadio app on the iPhone or smartphone beforehand to enable launching of the application on the navigation system. For details about the AppRadio app, visit the following site :  
U.S.A. : <http://www.pioneerelectronics.com/AppRadioMode>  
Canada : <http://www.pioneerelectronics.ca/AppRadioMode>

### Starting procedure

- 1 Touch the keys in the following order on the "Top Menu" screen.**  
⚙️ → **App Settings** → **App Connection Settings**
- 2 Select the type of OS in your device.**
- 3 Connect your device to this product via the separately sold cable.**

- iPhone : USB interface cable for iPod
- Android device : App Connectivity Kit (CD-AH200)  
If your device is an Android device, proceed to step 4.

- 4 Connect your Android device to this product via the Bluetooth wireless technology.**

### Using an application

- 1 Touch Apps on the "Top Menu" screen.**  
The AppRadio app is launched, and the AppRadio Mode screen (Application menu screen) appears.
- 2 Touch an application icon.**  
The application is launched, and the AppRadio Mode screen (Application operation screen) appears.
- 3 Operate the application.**  
If the **HOME** button is pressed while you are operating the application via the navigation system, you will return to the AppRadio Mode screen (Application menu screen).