



SPH-DA100

## AppRadio Start Up Guide

English

### About AppRadio

AppRadio is an innovative car audio system with a 7-inch capacitive touch panel screen display that when used along with Advanced App Mode, facilitates the use of smartphone applications from Pioneer and other providers in the vehicle.

In addition to the basic functions such as radio and Bluetooth® hands-free phoning, you'll have full access to the AppRadio-compatible smartphone applications when a smartphone is connected.



For details of functions and operation of this product, refer to AppRadio app Help. Please follow the steps below to see AppRadio app Help.

1. Install the AppRadio app on your iPhone or Android™ device.
2. Launch the AppRadio app without connecting the smartphone to this product.
3. Tap [**Settings**] → [**Manual**].

### Connecting a smartphone

#### For iPhone

Connect your iPhone to this product via the supplied iPhone cable.


#### For Android devices

1. Connect your Android device to this product via separately sold HDMI cables (CD-AH200C).

The cable connection method varies depending on your device.  
For details, refer to the App Connectivity Kit (CD-AH200C) manual.

2. Register your Android device and connect it to this product via the Bluetooth wireless technology.

For detailed procedures, refer to *Registering your device* in this guide.

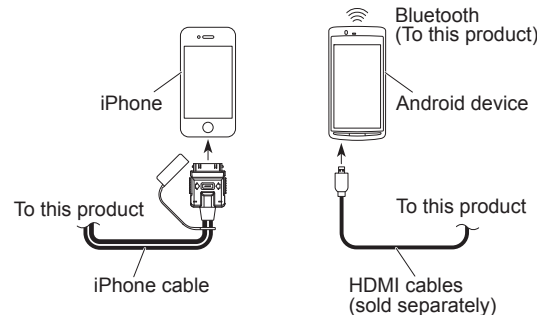

### Advanced App Mode

With Advanced App Mode, you can display the smartphone application screen on the AppRadio display. You can also operate AppRadio-compatible smartphone applications via the display.

#### AppRadio app

The AppRadio app is software for launching applications that support Advanced App Mode on AppRadio.

The AppRadio app is available as a download from the iTunes App Store or the Android Market™.

For details, see:

U.S.A. : <http://www.pioneerelectronics.com/AppRadio>

Canada : <http://www.pioneerelectronics.ca/AppRadio>

#### Using Advanced App Mode

When a smartphone is connected to this product, the AppRadio app will launch and icons for applications that support Advanced App Mode installed in the smartphone will be displayed. Launch an application on AppRadio by tapping the application icon you want to launch.

To find out what smartphone applications support Advanced App Mode, visit:

U.S.A. : <http://www.pioneerelectronics.com/AppRadio>

Canada : <http://www.pioneerelectronics.ca/AppRadio>

### Home button

When you press the Home button, the Home screen is displayed on-screen. The AppRadio Home screen is the main screen that allows access to your entertainment sources, apps, settings and more.

In Advanced App Mode, when you press the Home button, the AppRadio app Home screen is displayed. To display the main Home screen, press the Home button again.

#### Audio source control keys

When you press the Home button twice, the audio source control keys will be displayed on-screen. Using these keys, you can operate the audio source currently playing in the background without leaving the screen currently displayed.

#### Menu button & Back button (for Android devices)

Menu & Back buttons are available while running the AppRadio app or other supported applications for Android devices.

Audio source control keys



Home button   Menu button

Back button


### Inputting text

When you tap a text input area of an AppRadio-compatible smartphone application, a keyboard will be displayed on-screen. You can input the desired text directly from AppRadio.

### For iPhone

When  is tapped, the AppRadio keyboard is hidden and text can be entered using the iPhone's keyboard.

The AppRadio keyboard layout can be changed within the Keyboard Language Settings screen on AppRadio.

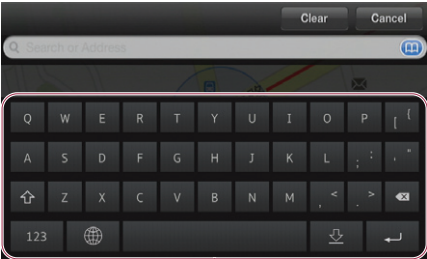

Keyboard

### Playing iPod music or videos

You can play and operate the audio or video source with the iPod connected.

When an iPod is connected to this product, an **[iPod]** icon appears on the home screen. When you tap **[iPod]** on the Home screen, the iPod audio source screen appears.


You can control playback by tapping the control keys.

To select the audio source:

1. Tap the  icon to display the playlist screen.
2. Locate and tap the audio source you want to play from the playlist.

To switch to video mode:

1. Tap the  icon to display the playlist screen.
2. Tap the  icon to switch to video mode.
3. Locate and tap the video source you want to play from the playlist.

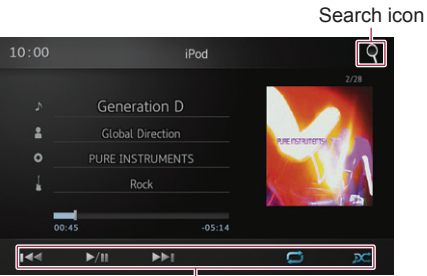

Search icon

Control keys

### Listening to the radio


When you tap the **[Radio]** icon on the Home screen, the radio source screen appears and the broadcast starts.

Tap a preset channel key to select a preset channel.

To manually adjust the frequency, tap  or .

To automatically search for receivable frequencies, touch and hold  or  until search starts.

To switch the frequency bands, tap  icon or  icon.

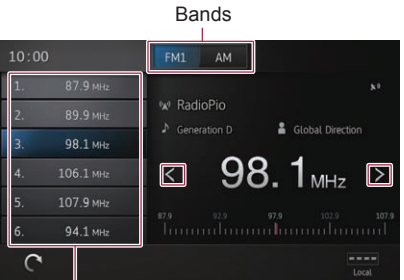

Preset channel keys

### Hands-free phoning

You can control the Bluetooth connection of the smartphone, and make a call using the incoming/outgoing call histories, transferred contacts, or by dialing.

### Registering your device

1. Tap the **[Phone]** icon to display the phone menu.
2. Tap the  icon to display the “**Bluetooth Connection Menu**”.
3. Tap the **[Connection]**.
4. Tap the  icon to display a list of registerable devices.
5. Tap the name of the device you want to register in the device list.
6. When PIN code input is required, enter the PIN code (The default PIN code is “0000”).

When registration is successful, Bluetooth connection starts.

### Disconnecting and re-connecting your device

Tap the name of your device in the registered device list to disconnect the Bluetooth connection. To connect your device and this product again, tap the name of your device in the registered device list.

### Transferring your phone book to this product

The phone book in your smartphone will be transferred to this product automatically when the smartphone is paired with it. If the phone book is not transferred automatically, perform the phone book transfer from your smartphone.

After finding the number you want to call in the phone book, you can select the entry and make the call.

### Setting menus

1. Display the **[Settings]** icon by flicking the Home screen.
2. Tap the **[Settings]** icon to display the menu top screen.
3. Tap the desired menu icon to switch between setting menu tabs.
4. Tap the desired setting menu from the menu list.

### System menu

From the System menu screen, the following settings can be accessed: language display, keyboard layout, date-time, subwoofer output, etc.

### Audio menu

From the Audio settings screen, audio settings including sound quality adjustment and in-car sound field (fader/balance) can be accessed.

### Favorites menu

From the Favorites menu screen, the registered favorite menus can be accessed.

You can register menus as Favorites by pressing and holding the desired menu name in each setting menu. A  icon will appear after registering the menu.