

TWO 6-1/2" 2-WAY SPEAKERS
DOS BOCINAS 6-1/2" DE 2 VIAS

TS-165P



Installation Manual
Manual de instalación

Visit our website / Visite nuestro sitio Web

Register your product at
Registre su producto en

<http://www.pioneerelectronics.com>

— Learn about product updates (such as firmware updates) for your product.

— Register your product to receive notices about product updates and to safeguard purchase details in our files in the event of loss or theft.

— Access owner’s manuals, spare parts information, service information, and much more.

— Infórmese de las últimas actualizaciones (por ejemplo, actualizaciones de firmware) para su producto.

— Registre su producto para recibir información sobre actualizaciones del producto y para mantener la seguridad de los detalles de su compra en nuestros archivos en caso de pérdida o robo.

— Acceso a manuales de instrucciones, información sobre piezas de recambio y mucho más.

PIONEER CORPORATION
28-8, Honkomagome 2-chome, Bunkyo-ku,
Tokyo 113-0021, Japan

PIONEER ELECTRONICS (USA) INC.
P.O. Box 1540, Long Beach, California 90801-1540, U.S.A.
TEL: (800) 421-1404

PIONEER EUROPE NV
Haven 1087, Keetberglaan 1, B-9120 Melsele, Belgium/Belgique
TEL: (0) 3/570.05.11

PIONEER ELECTRONICS ASIACENTRE PTE. LTD.
2 Jalan Kilang Barat, #07-01, Singapore 159346
TEL: 65-6378-7888

PIONEER ELECTRONICS AUSTRALIA PTY. LTD.
5 Arco Lane, Heatherton, Victoria, 3202 Australia
TEL: (03) 9586-6300

PIONEER ELECTRONICS DE MÉXICO S.A. DE C.V.
Bld. Manuel Ávila Camacho 138, 10 piso
Col.Lomas de Chapultepec, México, D.F. 11000
Tel: 52-55-9178-4270, Fax: 52-55-5202-3714

先鋒股份有限公司
台北市內湖區瑞光路407號8樓
電話：886-(0)2-2657-3588

先鋒電子（香港）有限公司
香港九龍長沙灣道909號5樓
電話：852-2848-6488


English

- ⚠ CAUTION**
- 1 Do not touch the speaker flexible wire ①.
 - 2 Do not change the direction of the speaker terminal assembly ②.
 - 3 Make sure lead and speaker terminals do not contact metal.
 - 4 When making connections, refer also to the instruction manual of the car stereo used.




16 cm 2-way speakers

Speaker installation
16 cm 2-way speakers

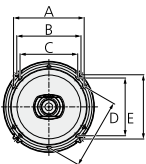

Front


- A 123 mm (4-7/8 in.)
B 113 mm (4-1/2 in.)
C 100 mm (3-7/8 in.)
D 123 mm (4-7/8 in.)
E 100 mm (3-7/8 in.)
F 113 mm (4-1/2 in.)

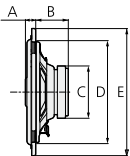



Side

- A 13 mm (1/2 in.)
B 41 mm (1-5/8 in.)
C ϕ 65 mm (2-5/8 in. Dia.)
D ϕ 128 mm (5 in. Dia.)
E ϕ 158 mm (6-1/4 in. Dia.)

- 1 Determine the location of the speaker as illustrated.

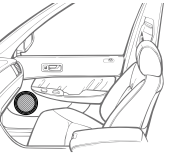

- 2 Install the speakers as illustrated.

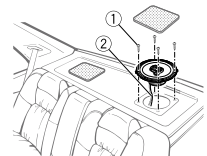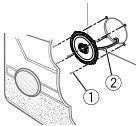

- ① Tapping-screws (4 mm $\times$ 25 mm)
② Cable (gray or white)
Other parts in the box: Speed nuts

Specifications

16 cm 2-way speakers
Reproduction system: Coaxial two way
Woofer: ϕ 158 mm (6-1/4 in. Dia.)
Water-resistant
Injection-molded polypropylene cone
High compliance, rolled edge
Heat-resistant voice coil
Magnet: 130 g (4.4 oz)
Tweeter: ϕ 30 mm (1-3/16 in. Dia.)
Dome
Nominal impedance: 4 Ω
Sensitivity: 88 dB ($\pm$ 1.5 dB)
Frequency response: 31 Hz to 16 kHz
(-20 dB)
Maximum music power: 200 W
Nominal power: 25 W
Weight (per speaker including accessory parts): 0.41 kg (14 oz)

NOTE
Specifications and the design are subject to modifications without notice.


Español

- ⚠ PRECAUCIÓN**
- 1 No toque el cable flexible del altavoz ①.
 - 2 No cambie la dirección del conjunto del terminal del altavoz ②.
 - 3 Asegúrese de que los terminales del cable y del altavoz no entren en contacto con metal.
 - 4 Al ajustar las conexiones, consulte también el manual de instrucciones del sistema de audio del vehículo.




Altavoces de 2 vías de 16cm

Instalación de los altavoces
Altavoces de 2 vías de 16cm

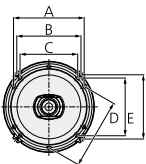

Frent



- A 123 mm
B 113 mm
C 100 mm
D 123 mm
E 100 mm
F 113 mm

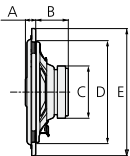



Later

- A 13 mm
B 41 mm
C ϕ 65 mm
D ϕ 128 mm
E ϕ 158 mm

- 1 Coloque los altavoces en los lugares indicados en la ilustración.

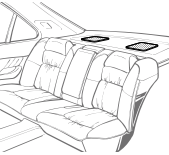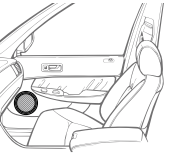

- 2 Instale los altavoces como se indica en la ilustración.

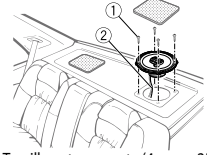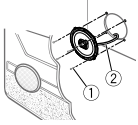

- ① Tornillo autorroscante (4 mm $\times$ 25 mm)
② Cable (gris o blanco)
Otras piezas incluidas: tuercas de velocidad