

Quick Start Guide

MULTIMEDIA NAVIGATION RECEIVER

AVIC-W8400NEX/AVIC-W6400NEX

This guide is intended to guide you through the basic functions of this navigation system. For details, please refer to the Operation manual stored on the website.



<http://www.pioneerelectronics.com/PUSA/Car>


Basic hardware buttons

AVIC-W8400NEX




- ① **VOL (+/-) button**
Press to adjust the AV (Audio and Video) source volume.
- ② **▢ button**
Press to switch between the Application screen/Map screen and the AV operation screen.
- ③ **≡ button**
Press to display the Top menu screen.
- ④ **≡ button**
Press to display the menu bar.

AVIC-W6400NEX

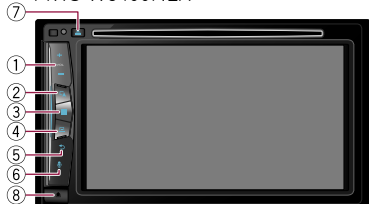


- ⑤ **↶ button**
Press to display the top menu screen or back to previous screen.
- ⑥ **🗣 button**
Press to activate the voice recognition mode.
- ⑦ **▲ button**
- ⑧ **🔧 button**
Press to remove the detachable faceplate from this product.

Switching screens using the touch panel keys

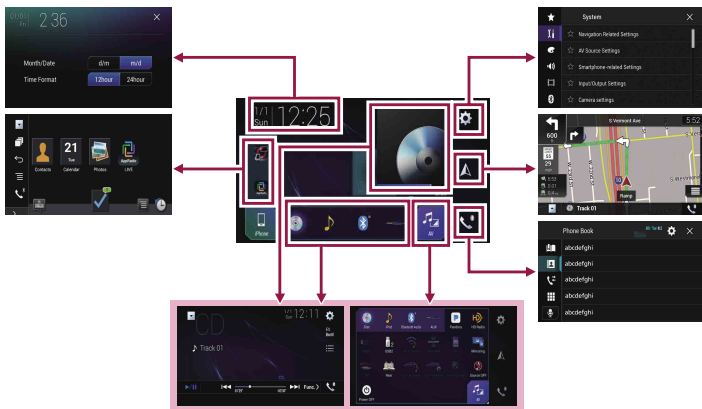


Switching screens using the hardware buttons

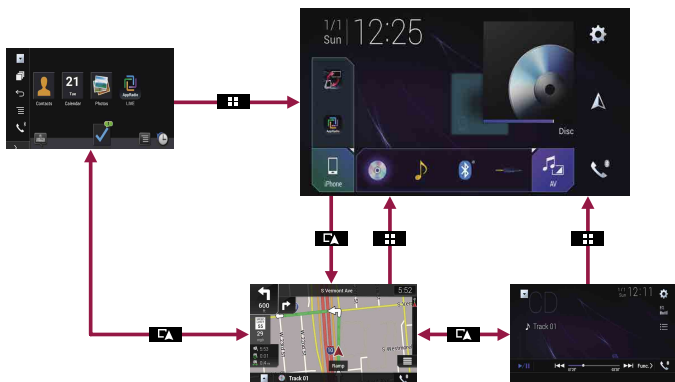

How to use the navigation menu screens

You can use various functions such as the route guidance and related settings.

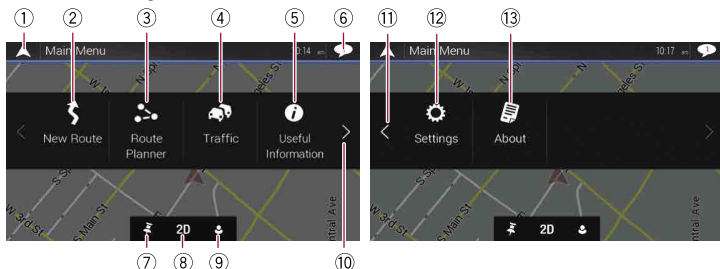

- ① Returns to the Map screen.
- ② Searches for your destination by the address or coordinates, or searches for the selected place of interest, etc.
- ③ Builds your route or edits the route currently set.
- ④ Displays the traffic information.
- ⑤ Displays useful information to support your driving.
- ⑥ Displays notifications that contain important information.
- ⑦ Displays the location that you saved as a favorite.
- ⑧ Switches among 2D, 3D, and 2D North up view modes.
- ⑨ Displays the “**User Profiles**” screen where you can create new profiles or edit the existing profiles.
- ⑩ Displays the next page of the navigation menu.
- ⑪ Displays the previous page of the navigation menu.
- ⑫ Configures the navigation-related settings and enables you to access the “**SyncTool**” screen.
- ⑬ Displays the information of your navigation system (the version information, or licenses, for example).

Searching for a location by address


- 1 **Press  button.**
The Map screen appears.
- 2 **Touch  to display the navigation menu on the Map screen.**
- 3 **Touch [New Route].**
- 4 **Touch [Address].**
- 5 **Input the information for the location you want to set as the destination.**



The 'Find Address' screen features a dark background with white text and input fields. At the top, it says 'Find Address' with a location pin icon and the time '10:39'. Below this are four input sections: 'Country' with 'United States, California' selected; 'City or ZIP code' with 'Enter City or ZIP Code' as a placeholder; 'Street' with 'Enter Street Name' as a placeholder; and a green 'Go to City' button at the bottom.


Touching the item next to each option displays the screen to enter the character or select one of options. After narrowing down your destination, the searched location appears on the Map screen.

- 6 **Touch [Select as Destination].**

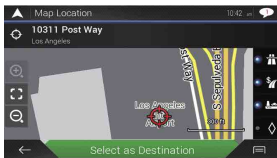

After a short summary of the route parameters, a map appears showing the entire route. The route is automatically calculated.

- 7 **Touch [Start Navigation].**

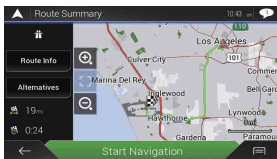


Your navigation system starts the route guidance.

How to use the map

Most of the information provided by your navigation system can be seen on the map. You need to become familiar with how the information appears on the map.

The following information marked with an asterisk (*) appears only when a route is set.

AV information is displayed at the bottom of the Map screen.

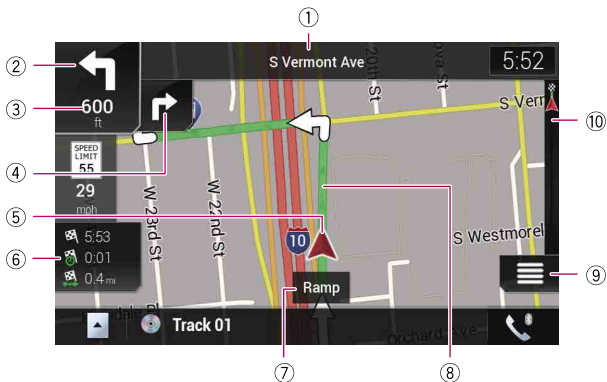

- ① Shows the number and name of the street to be used (or next guidance point).*
- ② Shows the next guidance point (maneuver).*
- ③ Shows the distance to the next guidance point (maneuver).*
- ④ Shows the maneuver after the next maneuver.*
- ⑤ Indicates the current location of your vehicle.
- ⑥ Displays the time and distance information for your route.*
- ⑦ Shows the name of the street (or city) that your vehicle is traveling on (or in).
- ⑧ Indicates the current route.*
- ⑨ Displays the Navigation menu screen.
- ⑩ Indicates the progress to the final destination.*

Pairing your Bluetooth® devices

You can use various functions (hands-free phoning and Bluetooth audio etc.) by connecting your Bluetooth devices to this navigation system. To use the functions, pair the devices with the navigation system in advance.

1 Activate the Bluetooth wireless technology on your devices.

2 Press the  button to display the Top menu screen.


3 Touch  and then .
The “Bluetooth” screen appears.

4 Touch [Connection].

5 Touch .
The system searches for Bluetooth devices waiting for a connection and displays them in the list if a device is found.


6 Touch the Bluetooth device name you want to register.

After the device is successfully registered, a Bluetooth connection is established by the system. Once the connection is established, the device name is displayed on the list.

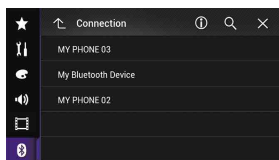

Using hands-free phoning

If your cellular phone features Bluetooth technology, this navigation system can be connected to your cellular phone wirelessly. Using this hands-free function, you can operate the navigation system to make or receive phone calls. You can also transfer the phone book data stored in your cellular phone to the navigation system.

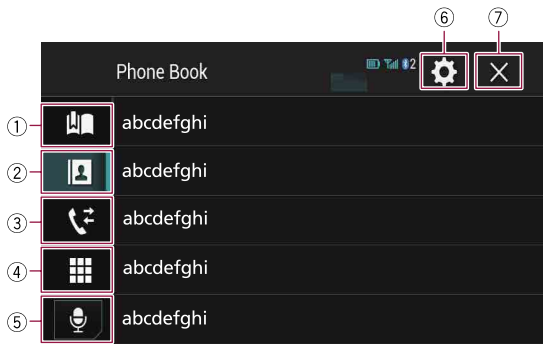


- ① Displays the preset dial screen.
- ② Switches to the phone book list.
- ③ Switches to the missed, received and dialed call lists.
- ④ Switches the mode to enter the phone number directly.
- ⑤ Switches to the voice recognition function.

- ⑥ Displays the Setting menu screen.
- ⑦ Closes the screen.

Using the radio

You can listen to the radio using this product.

Once you have stored broadcast channels, you can easily recall preset channels from memory with a single touch of a key.

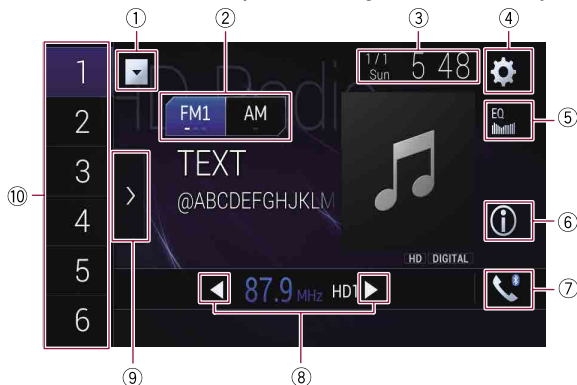

① Displays the source list.

② Selects a band.

③ Displays the Time and date setting screen.

④ Displays the Setting menu screen.

⑤ Recalls equalizer curves.

⑥ Switches the text display between the main channel and sub channels.

⑦ Displays the Phone menu screen.

⑧ Performs manual tuning or seek tuning.

⑨ Displays the preset channels.

⑩ Recalls the preset channel stored to a key from memory with a single touch of the key.

Stores the current broadcast frequency to a key for later recall by continuing to touch the key.

Guía de inicio rápido

RECEPTOR DE NAVEGACIÓN MULTIMEDIA

AVIC-W8400NEX/AVIC-W6400NEX

Esta guía tiene como propósito guiarlo a través de las funciones básicas de este sistema de navegación. Para obtener más información, consulte el manual de operaciones que se encuentra en el sitio web.



<http://www.pioneerelectronics.com/PUSA/Car>

Botones básicos de hardware

AVIC-W8400NEX




- ① **Botón VOL (+/-)**
Pulsar para ajustar el volumen de la fuente AV (Audio y Video).
- ② **Botón**
Pulsar para cambiar alternar entre la pantalla de Aplicación y Mapa y la pantalla de operación de AV.
- ③ **Botón**
Pulsar para mostrar la pantalla del menú superior.
- ④ **Botón**
Pulsar para mostrar la barra de menú.

AVIC-W6400NEX




- ⑤ **Botón**
Pulsar para mostrar la pantalla del menú superior o para regresar a la pantalla anterior.
- ⑥ **Botón**
Pulsar para activar el modo de reconocimiento de voz.
- ⑦ **Botón**
- ⑧ **Botón**
Pulse para retirar la placa frontal extraíble de este producto.

Alternar pantallas usando las teclas del panel táctil

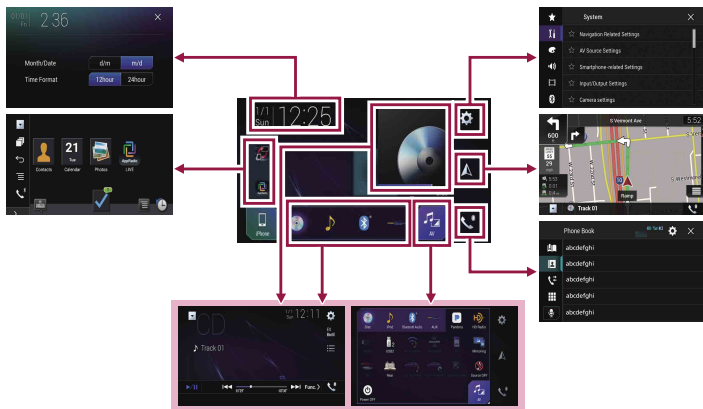


Alternar pantallas usando los botones de hardware

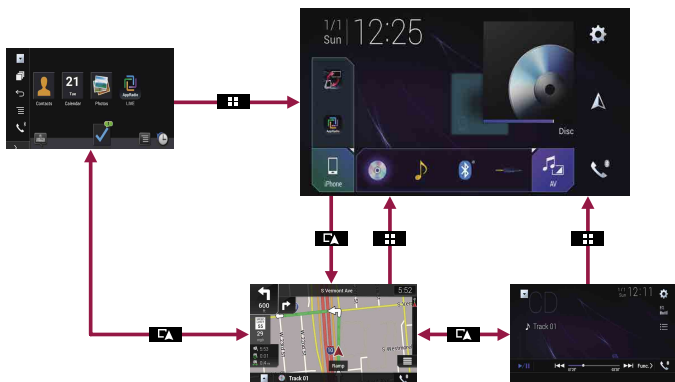


Cómo usar las pantallas del menú de navegación

Puede ver las distintas funciones como la orientación de ruta y la configuración relacionada.

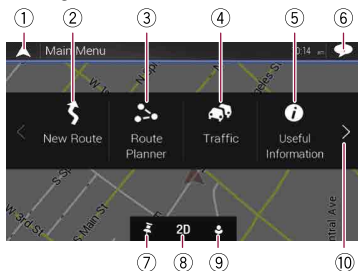

- ① Vuelve a la pantalla del mapa.
- ② Busca su destino por dirección o por coordenadas, o busca el punto de interés seleccionado, etc.
- ③ Crea su ruta o edita la ruta ya establecida.
- ④ Muestra la información del tráfico.
- ⑤ Muestra información útil para asistirlo mientras conduce.
- ⑥ Muestra notificaciones que contienen información importante.
- ⑦ Muestra la información que guardó como favorita.
- ⑧ Cambia entre los modos de visualización en 2D, 3D y 2D hacia el Norte.

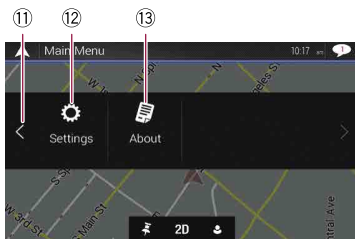

- ⑨ Muestra la pantalla **"Perfiles de usuarios"** en donde puede crear nuevos perfiles o editar los existentes.
- ⑩ Muestra la página siguiente del menú de navegación.
- ⑪ Muestra la página anterior del menú de navegación.
- ⑫ Configura los ajustes relacionados con la navegación y le permite el acceso a la pantalla **"SyncTool"**.
- ⑬ Muestra la información del sistema de navegación (por ejemplo, la información de la versión o las licencias).

Buscar una ubicación a partir de una dirección

- 1 **Pulse el botón** .
- Aparece la pantalla del mapa.
- 2 **Toque**  **para visualizar el menú de navegación en la pantalla del mapa.**
- 3 **Toque [Nueva ruta].**
- 4 **Toque [Dirección].**
- 5 **Ingrese la información de la ubicación que desea establecer como destino.**



Al tocar el elemento ubicado junto a cada opción se visualiza la pantalla para ingresar caracteres o seleccionar una de las opciones. Después de determinar su destino, la ubicación que se buscó aparece en la pantalla del mapa.

- 6 **Toque [Seleccionar como destino].**



Después de un breve resumen de los parámetros de la ruta, aparece un mapa que muestra la ruta completa. La ruta se calcula de forma automática.

- 7 **Toque [Iniciar navegación].**




El sistema de navegación inicia la orientación de ruta.

Cómo usar el mapa

La mayor parte de la información provista por el sistema de navegación se puede ver en el mapa. Es necesario que conozca cómo aparece la información en el mapa.

La siguiente información marcada con un asterisco (*) aparece solamente cuando se ha establecido la ruta.

La información de AV se muestra en la parte inferior de la pantalla del mapa.

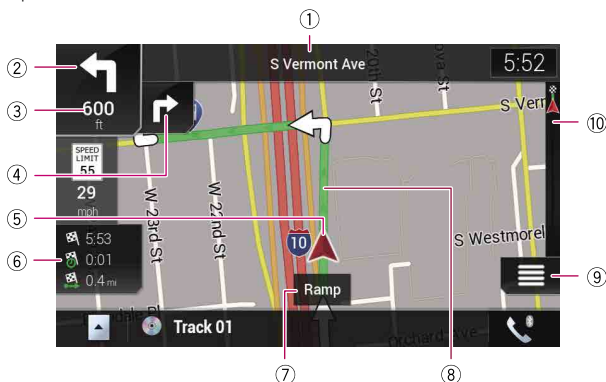

- ① Muestra la numeración y el nombre de la calle que se va a utilizar (o del siguiente punto de orientación).*
- ② Muestra el siguiente punto de orientación (maniobra).*
- ③ Muestra la distancia al siguiente punto de orientación (maniobra).*
- ④ Muestra la maniobra posterior a la siguiente.*
- ⑤ Indica la ubicación actual del vehículo.
- ⑥ Muestra la información del tiempo y la distancia de su ruta.*
- ⑦ Muestra el nombre de la calle (o ciudad) sobre la que su vehículo está circulando.
- ⑧ Indica la ruta actual.*
- ⑨ Muestra la pantalla del menú de navegación.
- ⑩ Indica el avance hacia el destino final.*

Emparejamiento de sus dispositivos Bluetooth®

Puede usar las distintas funciones (telefonía manos libres y audio Bluetooth, etc.) conectando sus dispositivos Bluetooth a este sistema de navegación. Para usar las funciones, primero empareje los dispositivos con el sistema de navegación.

1 Active la tecnología inalámbrica Bluetooth en sus dispositivos.

2 Pulse el botón  para visualizar la pantalla del menú superior.

3 Toque  y enseguida .
Aparece la pantalla "Bluetooth".


4 Toque [Conexión].

5 Toque .

El sistema busca los dispositivos Bluetooth que esperan conectarse y, si los encuentra, los muestra en la lista.


6 Toque el nombre del dispositivo Bluetooth que desea registrar.

Después de que el dispositivo se haya registrado correctamente, el sistema establece una conexión Bluetooth. Una vez establecida la conexión, el nombre del dispositivo se muestra en la lista.

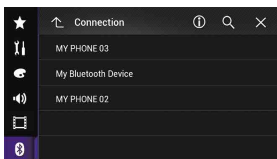

Uso de la telefonía manos libres

Si su teléfono celular cuenta con la tecnología Bluetooth, este sistema de navegación puede conectarse a su celular de forma inalámbrica. Mediante la función manos libres, puede operar el sistema de navegación para realizar o recibir llamadas telefónicas. También puede transferir al sistema de navegación los datos del directorio telefónico almacenados en su teléfono celular.

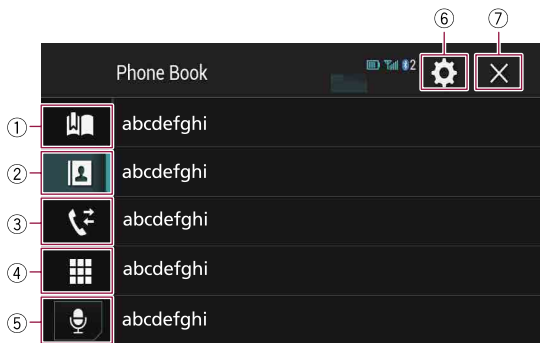


- ① Muestra la pantalla de dial predeterminado.
- ② Cambia a la lista del directorio telefónico.
- ③ Cambia a las listas de llamadas perdidas, recibidas y marcadas.
- ④ Cambia al modo para ingresar el número de teléfono directamente.
- ⑤ Cambia a la función de reconocimiento de voz.
- ⑥ Muestra la pantalla del menú de configuración.
- ⑦ Cierra la pantalla.

Usar el radio

Con este producto puede escuchar el radio.

Una vez que ha guardado los canales de las emisoras, puede recuperar fácilmente los canales predeterminados de la memoria con solo pulsar una tecla.

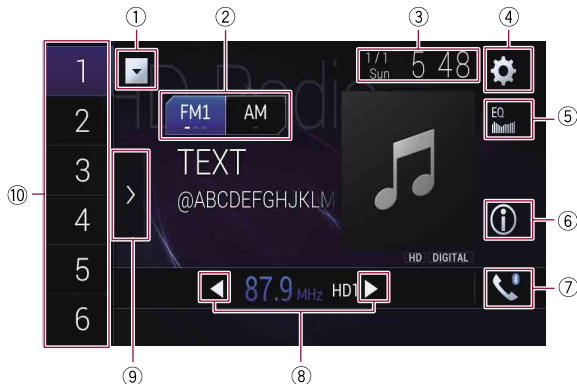

- ① Muestra la lista de fuentes.
- ② Selecciona una banda.
- ③ Muestra la pantalla de configuración de la hora y la fecha.
- ④ Muestra la pantalla del menú de configuración.
- ⑤ Recupera las curvas del ecualizador.
- ⑥ Cambia la visualización de texto entre el canal principal y los subcanales.
- ⑦ Muestra la pantalla del menú del teléfono.
- ⑧ Realiza la sintonización manual o la sintonización de búsqueda.
- ⑨ Muestra los canales preestablecidos.
- ⑩ Recupera el canal preestablecido almacenado en una tecla de la memoria con solo pulsar la tecla relacionada. Almacena la frecuencia de transmisión actual en una tecla para recuperarla posteriormente si sigue tocando la tecla.